



Mianyang Weibo Electronic Co.,Ltd

Designing, Manufacturing and Supplying WB Series Electric Isolated

Transducer and Digital Electrical Transducer since 1989

USER MANUAL

WBV332U05-S PULSATING DC Voltage Transducer

www.wbsensor.com

wbwm@wbdz.cn

Tel: 86 0816 2971265

Fax: 86 0816 2281934

ISO9001 ISO14000 ISO18000

Certified

WBV332U05-S PULSATING DC Voltage Transducer

Safety claim

The information in the safety claim of the equipment documentation is intended to ensure that equipment is properly installed in order to maintain it in a condition.

It is assumed that everyone who will be associated with the equipment will be familiar with the contents of that safety section, or this safety guide.

When electrical equipment is in operation, dangerous voltages will be present in certain parts of the equipment (e.g. the input terminal). Failure to observe warning notices, incorrect use, or improper use may endanger personnel and equipment and cause personal injury or physical damage.

Before working in the terminal strip area, the equipment must be isolated.

Proper and safe operation of the equipment depends on appropriate shipping and handling, proper storage, installation and commissioning, and on careful operation, maintenance and servicing.

The operating manual for the equipment gives instructions for its installation, commissioning, and operation. However, the manual cannot cover all conceivable circumstances or include detailed information on all topics. In the event of questions or specific problem, do not take any action without proper authorization. Contact the appropriate WB technical or sales office and request the necessary information.

Standard application

1. Accuracy

Accurate degree is conformed to IEC688:1992

2. Safety

2.1 Overload capability

Overload capability is conformed to IEC688:1992

2.2 Isolation voltage

Can be endured testing voltage is conformed to Q/72085584-0.1-2004

2.3 Insulation impedance

The insulation impedance is no less than 20M Ohm, is conformed to

Q/72085584-0.1-2004

3. Electromagnetic Capability

3.1 Electromagnetic field immunity test according to IEC 61000-4-3:1995


3.2 Power frequency magnetic field immunity test according to IEC 61000-4-8:1993

Product Description and Application


WBV332U05-S converts input pulsating DC voltage into a load independent output signal DC 0-5V or 0-10V. It has adopted modulation-demodulation isolation principle and average measurement method for real time measurement of DC voltage from electric net or electric circuit.

The product has certain advantages of total galvanic isolation between input/output/power, high accuracy, low drifting by temperature, and wide temperature bearable range, etc.


Product Dimensional Drawing (unit: mm)

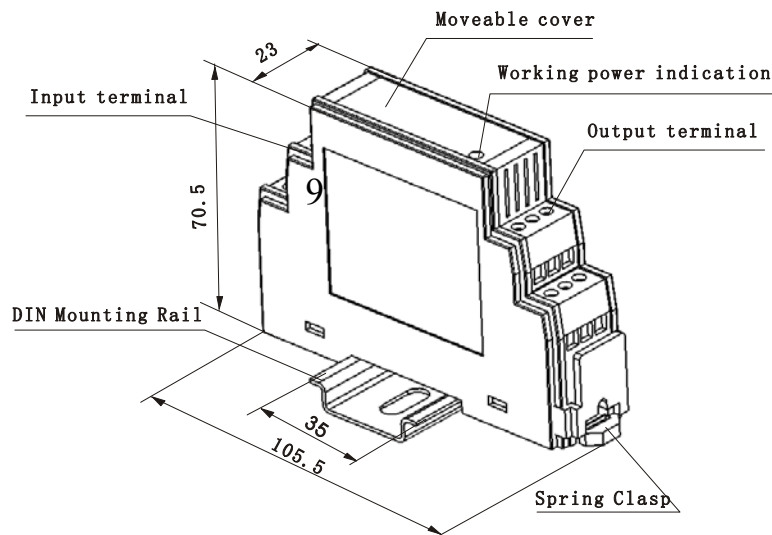

Function realization schematic drawing

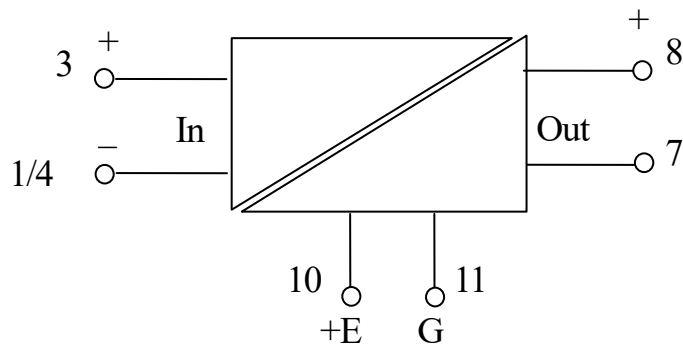

Product Terminal Identification Drawing

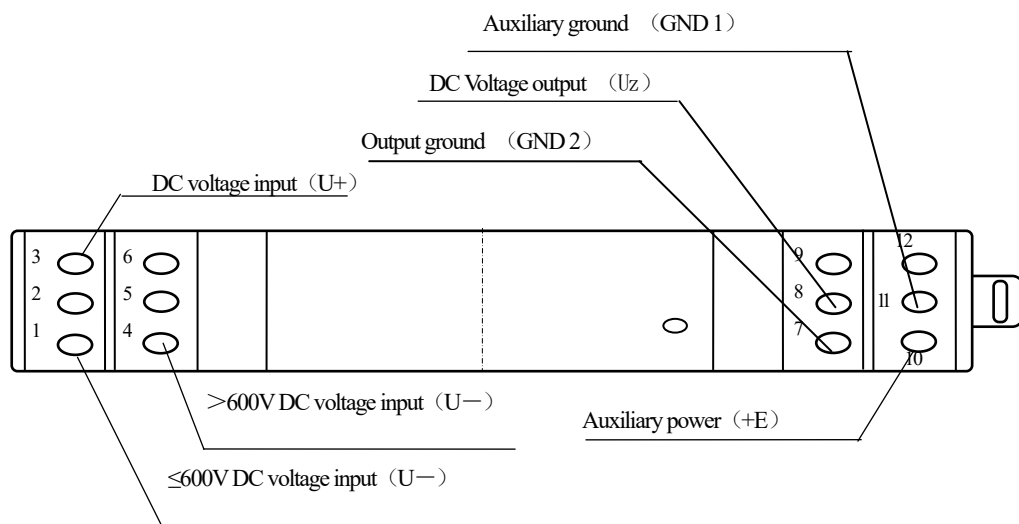

Non identified terminals cannot be used

Key Technical Data:


1. Input: DC 0~1000V;
2. Output: DC 0~5V or 0~10V
3. Accuracy class: 0.2
4. Input Impedance (R): when $V_x > 1V$, $R_i = V_x \times 10k \Omega / V$;
When $V_x \leq 1V$, $R_i > 1M \Omega$;
5. Linear Range: 0~120% of nominal input
6. Responding Time: 350ms

-
7. Over Load Capacity: 2 times of nominal input, continuous;
 8. Auxiliary Power: +12VDC / +24VDC
 9. Current consumption for static status: 20mA
 10. Isolation Voltage (Input/Output): $\geq 2500\text{Vdc}$, for 1 minute
 (Input/power): $\geq 2500\text{Vdc}$, for 1 minute
 (Output/power): $\geq 1500\text{Vdc}$, for 1 minute
 11. Output Ripple: $< 10\text{mV}$ (root-mean-square value, output load is 250Ω)
 12. Drifting by Temperature: ($0^{\circ}\text{C} \sim 50^{\circ}\text{C}$): $100 \times 10^{-6}/^{\circ}\text{C}$,
 ($-25^{\circ}\text{C} \sim 0^{\circ}\text{C}$, $50^{\circ}\text{C} \sim 70^{\circ}\text{C}$): $200 \times 10^{-6}/^{\circ}\text{C}$
 1. Ambient Temperature: (commercial grade) $0^{\circ}\text{C} \sim +50^{\circ}\text{C}$
 (Industrial grade) $-25^{\circ}\text{C} \sim +70^{\circ}\text{C}$
 15. Mounting : DIN Rail 35mm Mounting

Instruction of Installation and Use

1. The product has adopted structure compliance with EN50022; suitable for DIN rail mounting NS35/7.5, NS35/15. Installation steps are as following (please reference to dimensional drawing):
 - Step 1: Immobilize one side of product's mounting trough to the DIN mounting rail;
 - Step 2: Pull out the spring clasp;
 - Step 3: Place whole mounting trough to the DIN mounting rail properly;
 - Step 4: Release spring clasp to make sure the installation.
2. The product has calibrated before out of factory. After correctly wiring, it can be powered and used immediately. But for further precise signal sampling, user needs to warm-up the product for 3 minutes before use.
 - a) The auxiliary power requires isolation voltage $\geq 2000\text{V}_{\text{AC}}$, DC current output ripple $< 10\text{mV}$, and multiple converters can share with one set auxiliary power together.
 - b) When measuring dc voltage exceeds 1000volts, the circuit needs adding a resistor to divide the input dc voltage. The resistor is provided by Weibo Electronic, and only for each type of transducers special use

only.

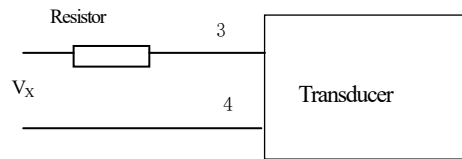

C) When measuring DC voltage less than 600V, uses terminals 3 and 1 for connection; when measuring DC voltage bigger than 600V, uses terminals 3 and 4 for connection

3. Basic testing method for accuracy

(1) According to the terminal definition table to connect the testing circuit;


(2) The testing must to be done by under the following conditions;

Auxiliary power: $24V \pm 5\%$, ripple $\leq 5mV$

Ambient temperature: $25^{\circ}C \pm 5^{\circ}C$

Relative humidity: RH(45~75)%

Accuracy for Signal Power Source instrument: 0.05

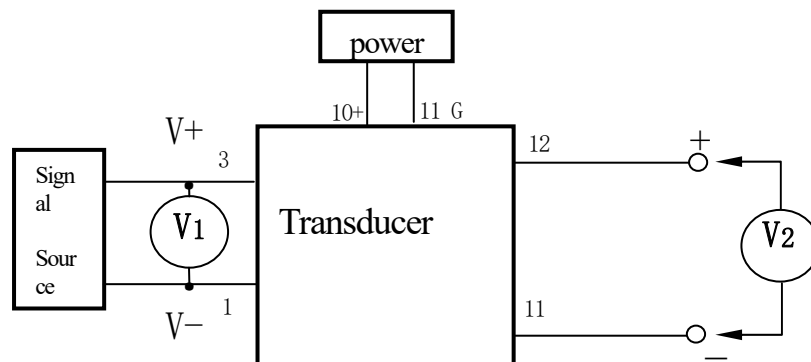

(3) Warming up the transducer for 3 minutes

(4) Using output monitoring meter V1 to measuring the output of signal power source instrument, set any input value which is within the measuring range of the transducer U_r (e.g. if input range is 100V, the output is 0~5V). the expected output value U_z should be

calculated as:

$$U_Z = 5V \times U_r / 100V$$

- (5) Using output monitoring meter V2 to measuring the output voltage U_o of the transducer, the basic introduced error γ of the transducer should be calculated as:

$$\gamma = (U_o - U_Z) / 5V \times 100$$

- (6) Repeating step (4) (5), if calculated absolute value is less than the given accuracy value of the transducer, it shows the transducer's accurate grade is qualified.

Caution:

1. Pay attention to the auxiliary power information, especially the auxiliary power grade, and polarity, other wise will damage the product.
2. pay attention to the wire connection; wrong terminal connection will cause malfunction of the product and even damage the product;
3. Don't dismantle the product, and carry with care to avoiding bump and fall of the product;
4. If the product has been using under the environment with strong magnetic field interference, please pay attention to the shield of input wire, and the output signal wire should be as short as possible. For product intensive installation, the space between each product should not be smaller than 10mm.
5. Only use identified terminals.
6. There is no lightening strike prevention circuit design in this product. For out door and hazardous environment using, please add protective alternatives.
7. This product uses fire prevent ABS crust, its temperature withstand is only limited as +85°C, higher than this limitation will cause the product deformation. Please use and store carefully.

Product Input-Output characteristic curve